
COMPACT CRIB EVACUATION FRAME

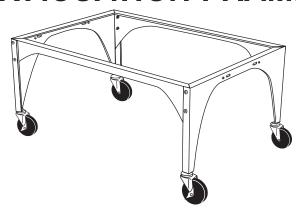

ASSEMBLY INSTRUCTIONSFor use only with Foundation Compact Cribs.

A WARNING

- Evacuation Frame Kit contains screws and small parts that can be hazardous to children before assembly. MUST be assembled by an adult.
- When evacuating children, children MUST be seated in crib.
- When using evacuation frame with a crib with an adjustable mattress support, mattress support MUST be in lowest adjustment position.
- Always lock casters when not moving evacuation crib.

Read all instructions BEFORE assembly and USE of evacuation frame kit. KEEP INSTRUCTIONS FOR FUTURE REFERENCE.

Carefully unpack carton and identify all parts.

Before each use or assembly, inspect all parts for damaged hardware, loose joints, missing parts, or sharp edges. DO NOT use evacuation frame if any parts are missing or damaged. For parts or assistance, call Foundations™ at 1-866-740-0195 (Monday - Friday, 9:00 a.m. - 4:00 p.m. Eastern Time).

TOOLS REQUIRED:

- PHILLIPS SCREWDRIVER (NOT INCLUDED)
- ADJUSTABLE WRENCH (NOT INCLUDED)





Division of Shamrock Industries, Inc. P.O. Box 1910 Medina, OH 44258-1910 1-866-740-0195

Part Description A. End Frame B. Side Rail C. 3/8" Hex Nut, Zinc Plated D. 3/8" Lock Washer, Zinc Plated E. 1/4-20 x 3/4" Truss Head Phillips Machine Screw, Zinc Plated F. 1/4-20 x 2" Truss Head Phillips Machine Screw, Zinc Plated G. 1/4-20 Hex Nut, Zinc Plated H. 1/4" Lock Washer, Zinc Plated I. 1/4-20 Hex Nut with Nylon Insert J. Locking Caster (has brake lever) K. Non-locking Caster	2 2 4 4 8 8 4 8 8 4 4
B. Side Rail C. 3/8" Hex Nut, Zinc Plated D. 3/8" Lock Washer, Zinc Plated E. 1/4-20 x 3/4" Truss Head Phillips Machine Screw, Zinc Plated F. 1/4-20 x 2" Truss Head Phillips Machine Screw, Zinc Plated G. 1/4-20 Hex Nut, Zinc Plated H. 1/4" Lock Washer, Zinc Plated I. 1/4-20 Hex Nut with Nylon Insert J. Locking Caster (has brake lever)	2 4 4 8 4 8 8 4
C. 3/8" Hex Nut, Zinc Plated D. 3/8" Lock Washer, Zinc Plated E. 1/4-20 x 3/4" Truss Head Phillips Machine Screw, Zinc Plated F. 1/4-20 x 2" Truss Head Phillips Machine Screw, Zinc Plated G. 1/4-20 Hex Nut, Zinc Plated H. 1/4" Lock Washer, Zinc Plated I. 1/4-20 Hex Nut with Nylon Insert J. Locking Caster (has brake lever)	4 4 8 4 8 8 8
D. 3/8" Lock Washer, Zinc Plated E. 1/4-20 x 3/4" Truss Head Phillips Machine Screw, Zinc Plated F. 1/4-20 x 2" Truss Head Phillips Machine Screw, Zinc Plated G. 1/4-20 Hex Nut, Zinc Plated H. 1/4" Lock Washer, Zinc Plated I. 1/4-20 Hex Nut with Nylon Insert J. Locking Caster (has brake lever)	4 8 4 8 8
E. 1/4-20 x 3/4" Truss Head Phillips Machine Screw, Zinc Plated F. 1/4-20 x 2" Truss Head Phillips Machine Screw, Zinc Plated G. 1/4-20 Hex Nut, Zinc Plated H. 1/4" Lock Washer, Zinc Plated I. 1/4-20 Hex Nut with Nylon Insert J. Locking Caster (has brake lever)	8 4 8 8 4
F. 1/4-20 x 2" Truss Head Phillips Machine Screw, Zinc Plated G. 1/4-20 Hex Nut, Zinc Plated H. 1/4" Lock Washer, Zinc Plated I. 1/4-20 Hex Nut with Nylon Insert J. Locking Caster (has brake lever)	8 8 4
G. 1/4-20 Hex Nut, Zinc Plated H. 1/4" Lock Washer, Zinc Plated I. 1/4-20 Hex Nut with Nylon Insert J. Locking Caster (has brake lever)	8 8 4
H. 1/4" Lock Washer, Zinc Plated I. 1/4-20 Hex Nut with Nylon Insert J. Locking Caster (has brake lever)	8
I. 1/4-20 Hex Nut with Nylon Insert J. Locking Caster (has brake lever)	4
J. Locking Caster (has brake lever)	
K. Non-locking Caster	2
	2
L. 1/4" Flat Washer	4
M. Nylon Spacer	4
A. B. G. H. H. F. M.	

ONE YEAR LIMITED WARRANTY


Foundations™ warrants this product to be free from all defects in material and workmanship when used according to the manufacturer's instructions to the original owner for a period of one year from date of purchase. The warranty does not apply to damage caused by product alteration, normal wear and tear, misuse or abuse of the product. Keep your sales receipt as a record of the date of purchase. For replacement parts or warranty issues, please contact Foundations™ as we are better able to serve you. DO NOT return the product to your retailer or distributor.


If you need assistance, call or write: Foundations™, P.O. Box 1910, Medina, OH 44258-1910 Telephone 1-866-740-0195, Fax 1-330-721-6799


Frame Assembly

- 1. Place one Side Rail (B) inside the Leg of one End Frame (A) (Fig. 1), align holes in End Frame (A) with holes in Side Rail (B).
- 2. Insert two 1/4-20 x 3/4" Machine Screws (E) through holes in leg (Fig 2). Place a 1/4" Lock Washer (H) and 1/4-20 Hex Nut (G) on the end of each screw (E). HAND TIGHTEN.
- 3. Repeat Steps 1. and 2. to attach opposite Side Rail (B) to the same End Frame (A).
- 4. Repeat Steps 1. through 3. to attach opposite End Frame (A) to the free ends of the Side Rails (B).
- 5. Tighten all 8 Screws and Hex Nuts securely.
- 6. Turn Evacuation Frame upside-down. At both corners on a long side of frame, attach a **Locking Caster (J)** to each leg by inserting caster stem down through hole in bracket at bottom of Leg (Fig. 3). Secure with a 3/8" Lock Washer (D) and a 3/8"-18 Hex Nut (C). Repeat to attach 2 Non-Locking Casters (K) on corners of other long side of frame.
- 7. Tighten all 4 Casters and Hex Nuts securely.

Frame assembly is now complete and ready to attach to crib.

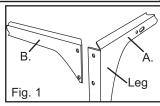

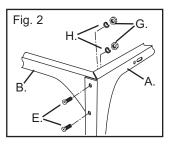

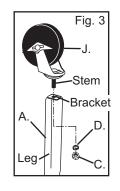

- K.

Fig. 4

Crib End Pane

> On drop side crib models, drop side should be on this side.

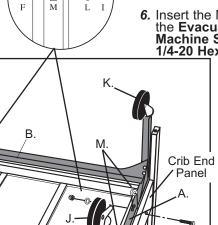


Fig. 5

-[]

Assembly To Crib

(This step is easier to do using two people.)

- 1. If the crib has an adjustable Mattress Support, set Mattress Support in its lowest position.
- 2. Turn the crib upside-down on a smooth surface. To keep the crib from rocking as you work, put a book or other item under each side of one crib End Panel. **NOTE:** If adding evacuation frame to an assembled crib

with casters, remove crib casters.

- Turn Frame Assembly upside-down and carefully place on the underside of the Mattress Support (Fig. 4). NOTE: On Drop Side crib models, the Locking Casters of the Frame should be positioned on the same side as the Drop Side of the crib.
- 4. On one end of the crib, align two holes in the Frame with the holes in the Bottom End Rail of crib End Panel.
 - For Drop Side crib models, position the Frame closer to the Stationary Side. This will ensure that the Drop Side will still operate after the Frame is attached.

- For Stationary Side crib models, either set of holes may

be used.

- Be sure frame is attached straight on crib and does not protrude outside crib legs.

- 5. From outside of the end panel, insert two 1/4-20 x 2" Machine Screws (F) through holes in Bottom End Rail of Crib End Panel and through two Nylon Spacers (M). Be sure to place the **Nylon Spacer** (M) between the **Frame End** (A) and the Crib Bottom End Rail (Fig. 5). **NOTE**: All four spacers may not be needed. DO NOT force spacers into space between frame and Bottom End Rail.
- **6.** Insert the Machine Screws into the corresponding holes in the Evacuation Frame End (A) (Fig. 4). On the end of each Machine Screw (F), place a 1/4" Flat Washer (L) and a 1/4-20 Hex Nut with Nylon Insert (I), DO NOT Tighten.
 - 7. Repeat Steps 2 and 6 for the other end of the
 - 8. Securely tighten all 4 Machine Screws and Hex Nuts with Nylon Insert on both ends of the crib.
 - 9. Carefully turn the Evacuation Crib to its upright position.

The Evacuation Crib is now ready for use.